


Deck & bulkhead penetration glands



Component parts.

Clearance hole =
Thread diameter + 2 mm max.

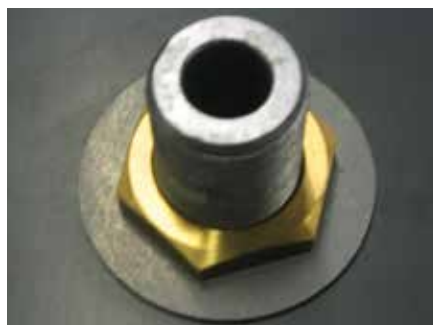

1 Fit washer and tighten lock nut.



3 Remove top nut & internal parts.



2 Top view of gland with gasket in position.



4 Remove the minimum number of rings to allow cable to pass through the seal.



5 Size washers to cable & insert if required.



8 Fit compression spigot.



6 Push seal into place.



9 Locate nut on compression spigot.



7 Fit top washer if required.



10 Push cable through assembled gland & tighten nut.